

- [Locate a Retailer](#)
- [Can I Install It?](#)
- [Accessories](#)
- [FAQ](#)
- [Warranty Registration](#)
- [Request Information](#)
- ✉ [Email Page](#)
- 🖨 [Print Page](#)

Home >> Support Center >> Wireless Keypad Programming >> Non Intellicode-Black

---

## Programming Instructions for a Non-Intellicode Wireless Keypad

### [Installation Instructions](#)

### [Determining your Door Code](#)

### [Select your Personal Identification Number \(PIN\)](#)

### [Programming the Keypad](#)


### [Test Operation](#)

### [Troubleshooting](#)


---

### Installation Instructions

**Step 1-1** Mount Wireless Keypad on a flat vertical surface with enough room above to slide cover up. (See below)

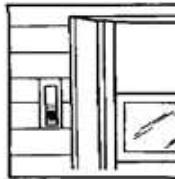

**Step 1-2** Slide Keypad cover up and pull off Wireless Keypad. Slide off battery cover and remove battery. (See below)

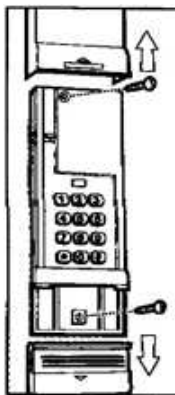

**Step 1-3** Mark two holes by tapping a small nail through screwholes on Keypad. Drill 1/16" pilot holes then fasten with #6 screws enclosed. Replace Keypad Cover.

**Step 1-4** Replace battery and slide battery cover back into place.

**WARNING :** MOVING DOORS CAN INJURE PEOPLE OR PETS.

#### Mount Wireless Keypad:

- Where door can be seen.
- Out of reach of children.

- Where user cannot stand under or near moving door.

**For Maximum Safety:**


- Show everyone who will use Door Operator how to do it safely.
- Operate door only when it's fully visible.
- Do not operate door when anyone is in the door area.
- Do not allow anyone to run under moving door.
- Do not allow children or pets to play under door.
- Do not let children play with controls.



**Determining Your Door Code**

The Door Code is a 3 or 4 digit number created from the switch settings on your Door Operator.

**Step 2-1** Locate Operator Code Switches on Door Operator. (See below)

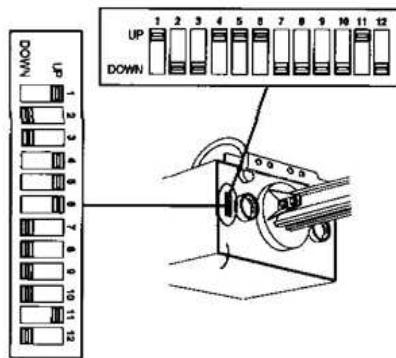

**Step 2-2** Mark down your Operator Switch Settings by circling U (Up) or D (Down) for each switch setting. (See below)


| DOOR OPERATOR CODE SWITCH SETTINGS |   |   |         |   |   |         |   |   |         |    |    |
|------------------------------------|---|---|---------|---|---|---------|---|---|---------|----|----|
| 1                                  | 2 | 3 | 4       | 5 | 6 | 7       | 8 | 9 | 10      | 11 | 12 |
| U                                  | U | U | U       | U | U | U       | U | U | U       | U  | U  |
| D                                  | D | D | D       | D | D | D       | D | D | D       | D  | D  |
| Group 1                            |   |   | Group 2 |   |   | Group 3 |   |   | Group 4 |    |    |

**Step 2-3** Convert each group of three switch settings to a group number shown in chart below:

| Switch Settings |      |      | Group Number |
|-----------------|------|------|--------------|
| UP              | UP   | UP   | 7            |
| UP              | UP   | DOWN | 6            |
| UP              | DOWN | UP   | 5            |
| UP              | DOWN | DOWN | 4            |
| DOWN            | UP   | UP   | 3            |
| DOWN            | UP   | DOWN | 2            |
| DOWN            | DOWN | UP   | 1            |
| DOWN            | DOWN | DOWN | 0            |

**Step 2-4** Fill in 3 DOOR CODE numbers for 9 Code Switches and 4 Door Code numbers for 12 Code Switches. (See the Code Setting Chart in Step 2-2).

**EXAMPLE:** The Door Operator Code Switches are set as shown. On the figure below these settings have been circled. The first 3 switches (Group 1) are set UP DOWN DOWN. The switch pattern is matched to the one shown on the chart in Step 2-3. The pattern group number is 4. In the space under Group 1 write 4. In the space under Group 1 write 4. Repeat this step in each of the 3 groups of settings, writing the matching numbers in the space below. The 4 digit code for the Door Operator example is 4702. (See below)

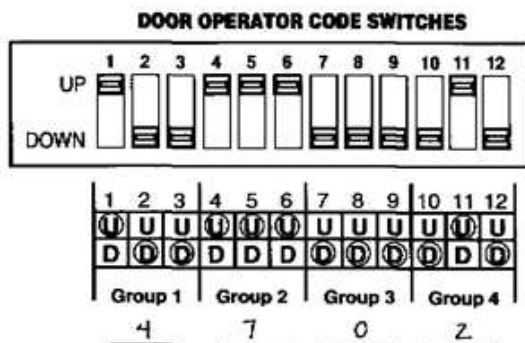

### Selecting Your Personal Identification Number (PIN)

Your **PIN** number can be created from any group of numbers up to 8 digits of your choice. (Do **NOT** use # or \*.) **NOTE:** It is **NOT** good security to use your address, phone number, birthdate, etc.

| TO PROGRAM         | ACTION  | RED LIGHT                   |
|--------------------|---|-----------------------------|
| Step 4-1           | RESET KEYPAD -- Slide Keypad cover half way up. While pressing the # and 8 buttons simultaneously, slide the Keypad Cover up until it latches. Release # and 8 buttons. | Stays lit.<br><br>Goes out. |
| Step 4-2           | Press 3, 5, 7 and # buttons   | Flash 1 time per second.    |
| Step 4-3           | Enter PIN and press # button  | Flashes 2 times per second. |
| Step 4-4           | Enter DOOR CODE from Step 2-2 and press * button  | Goes out.                   |
| Step 4-5           | Slide Keypad Cover down.  |                             |
| Step 4-6           | Test Keypad -- Go to Section Operating the Keypad   |                             |
| TO CHANGE PIN ONLY | ACTION  | RED LIGHT                   |
|                    | Slide Keypad Cover up until it latches.   | Flashes once.               |
|                    | Enter OLD PIN and press #   | Flashes 1 time per second.  |
|                    | Enter new PIN and press # button.   | Flashes 2 times per second. |

|  |   |           |
|--|---|-----------|
|  | Press * button.   | Goes out. |
|  | Slide Keypad cover down.<br>Test Keypad -- Slide Keypad cover down.<br>Test Keypad -- Go to Operating the Keypad. |           |

### To Operate Keypad

**Step 5-1** Slide Keypad cover up until it latches. Enter PIN and press \* button. Slide Keypad Cover down.

### Troubleshooting

| PROBLEM                                 | CAUSE  | ACTION  |
|---|--|---|
| Keypad does not light.                  | 1. Keypad Cover is not fully open.<br>2. Dead battery. | 1. Pull Keypad Cover up until it catches open.<br>2. Replace battery. |
| Door does not open. Red light blinking. | 1. Wrong PIN entered.                                  | Reenter PIN (See Programming Keypad )                                 |
| Door does not open.                     | 1. Door Code does not match Door Operator.             | 1. Reenter Door Code. (See Programming Keypad ).                      |